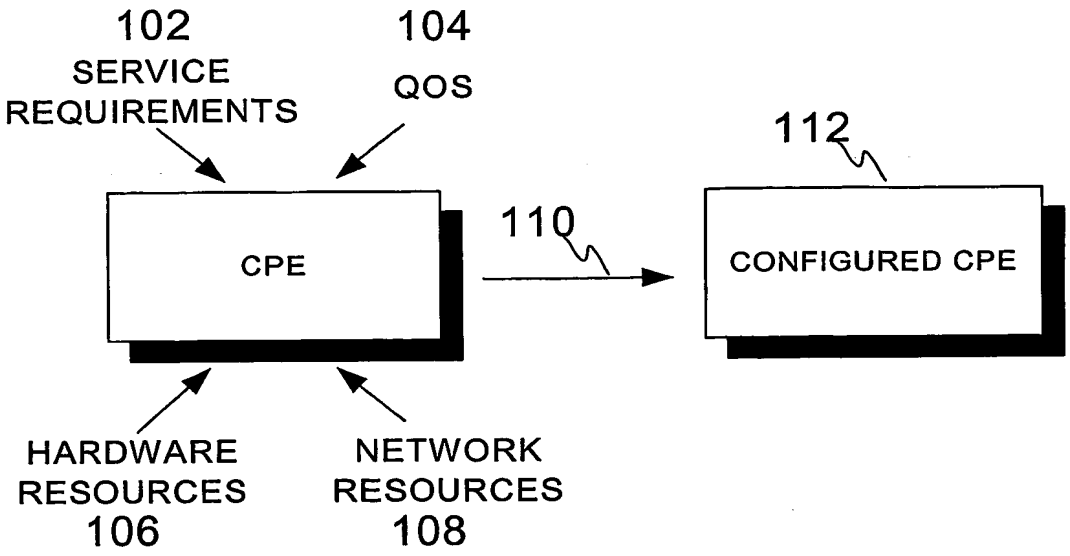

Figure 1

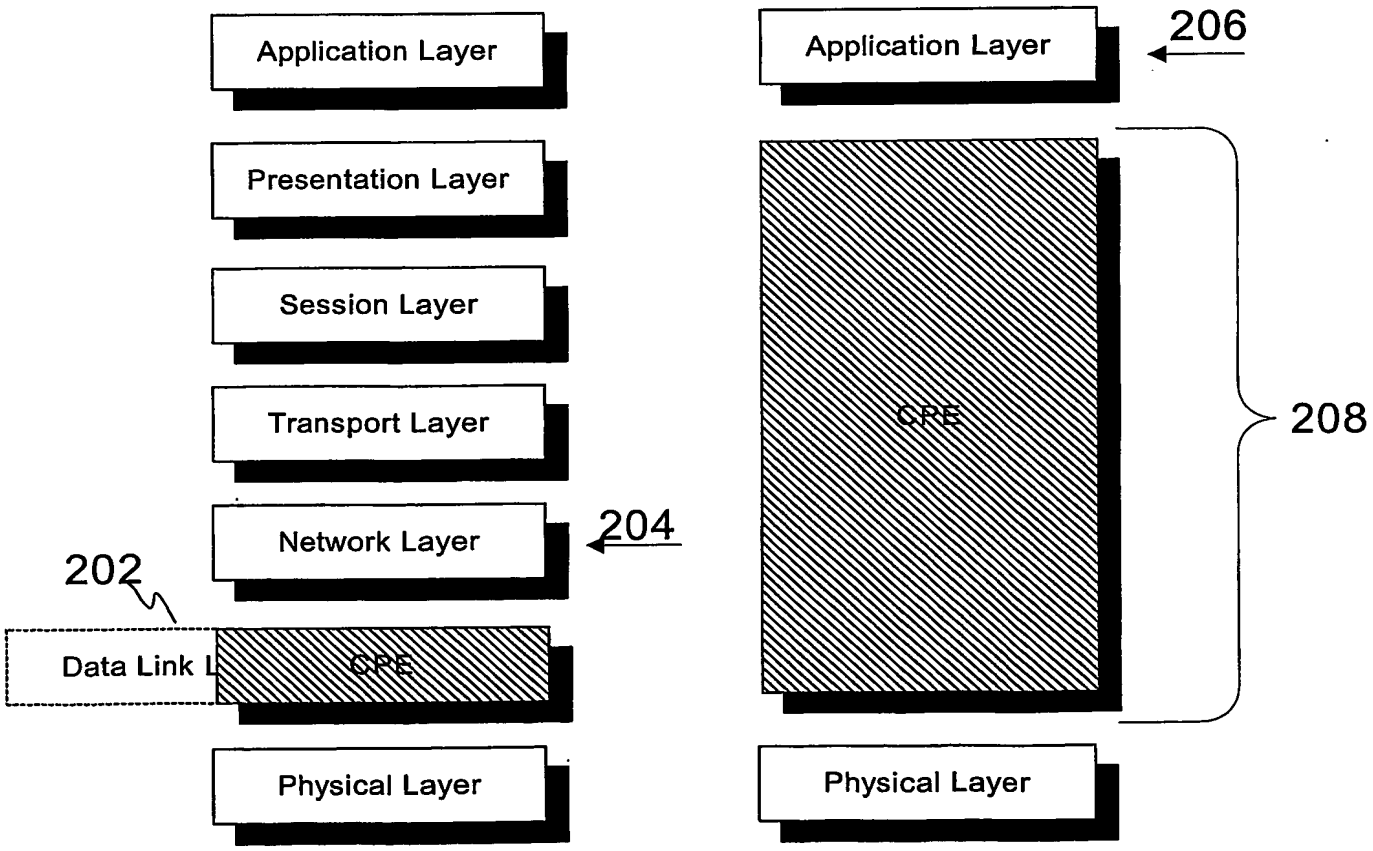

Figure 2

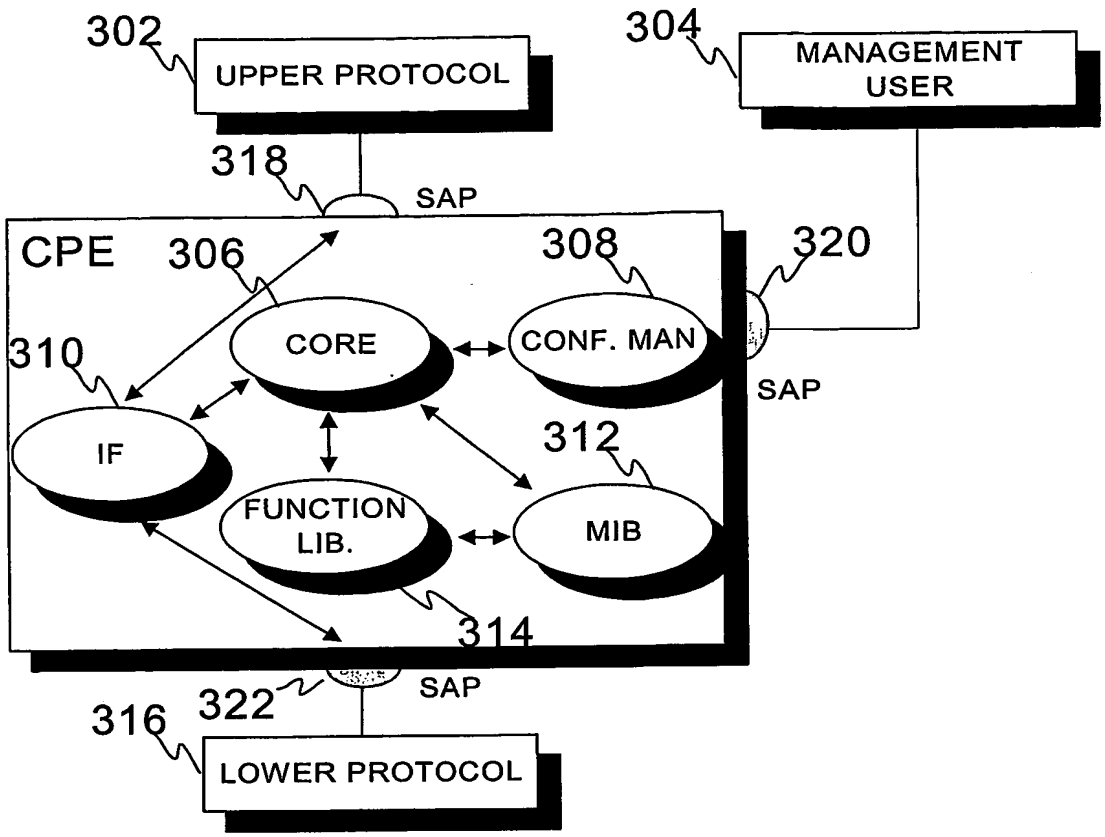

Figure 3

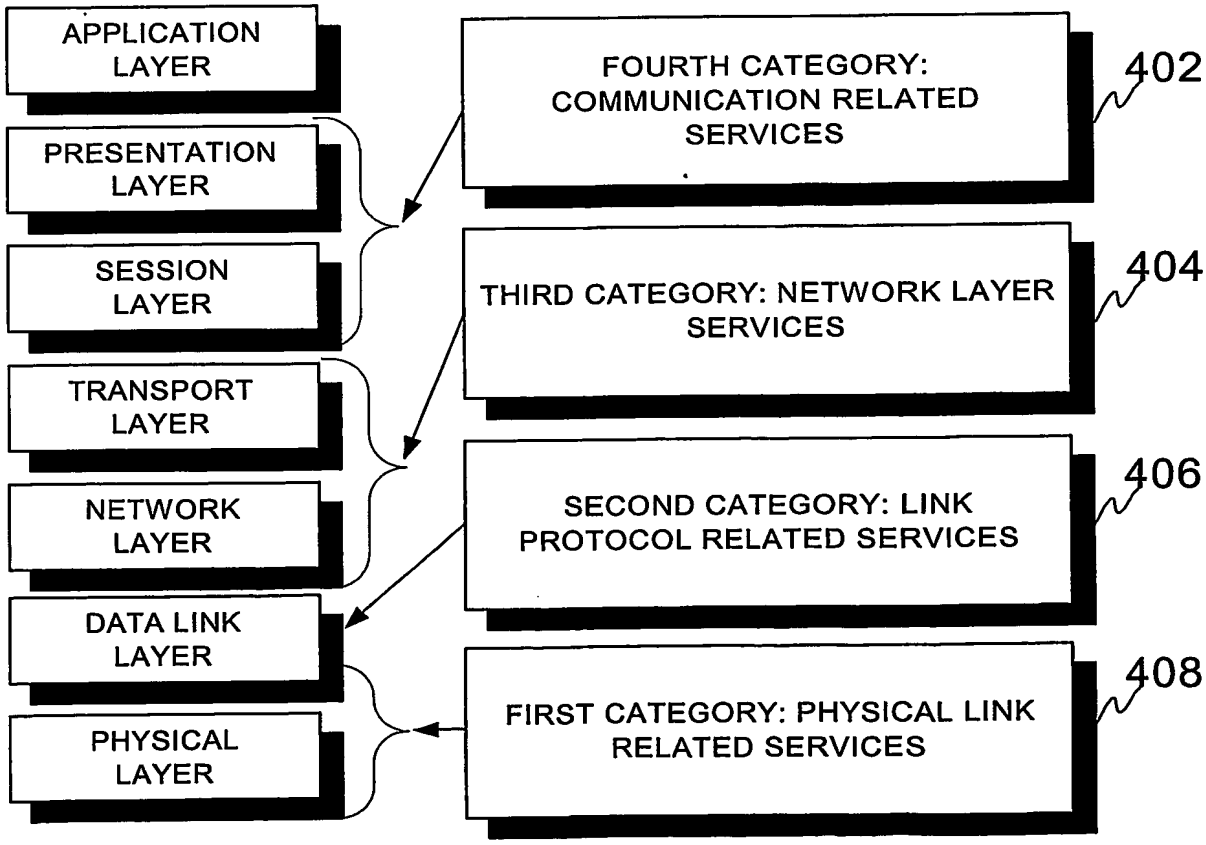

Figure 4

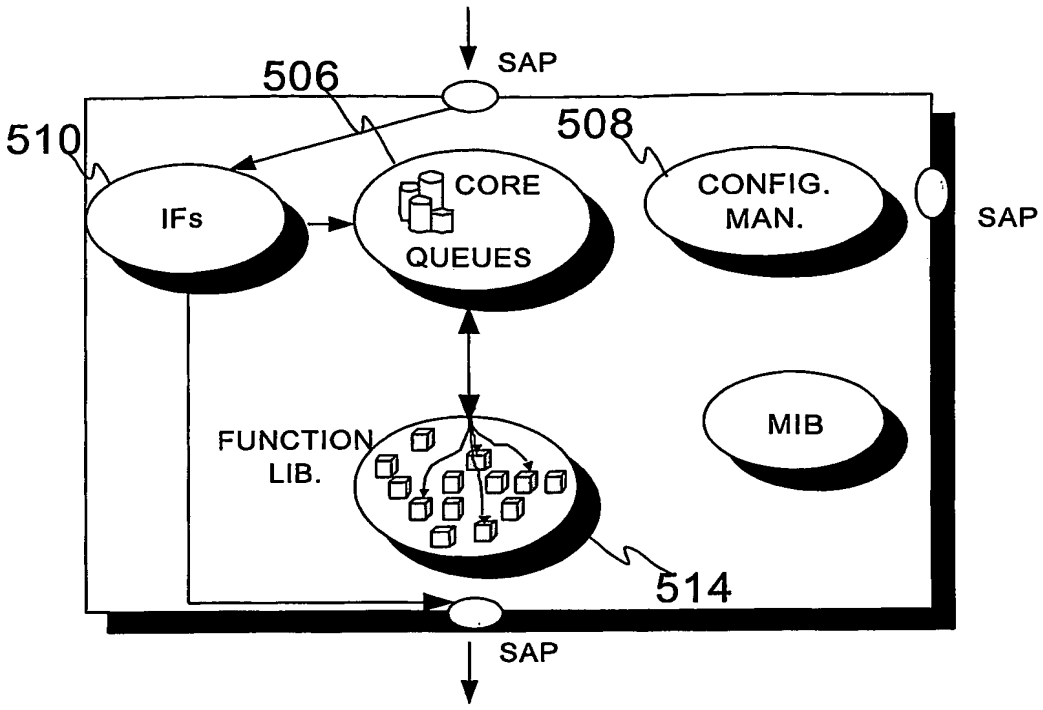

Figure 5

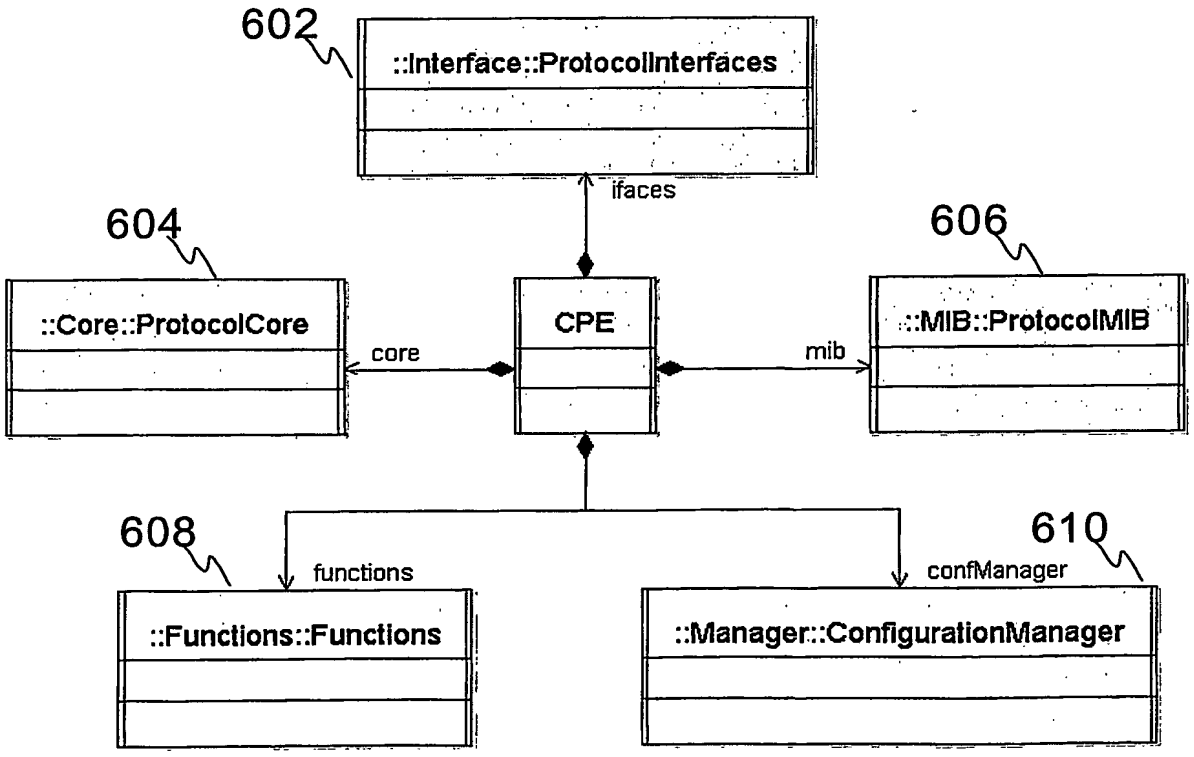

Figure 6

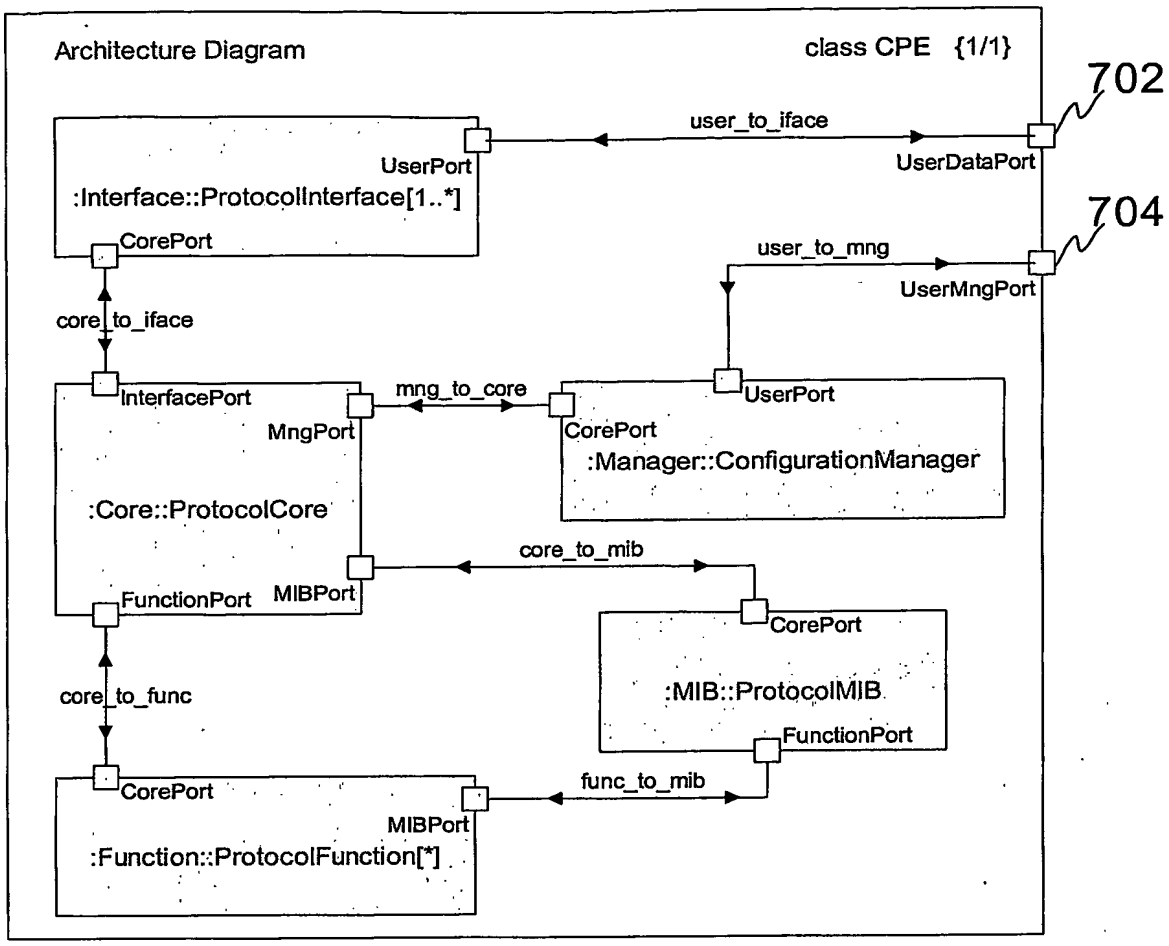

Figure 7

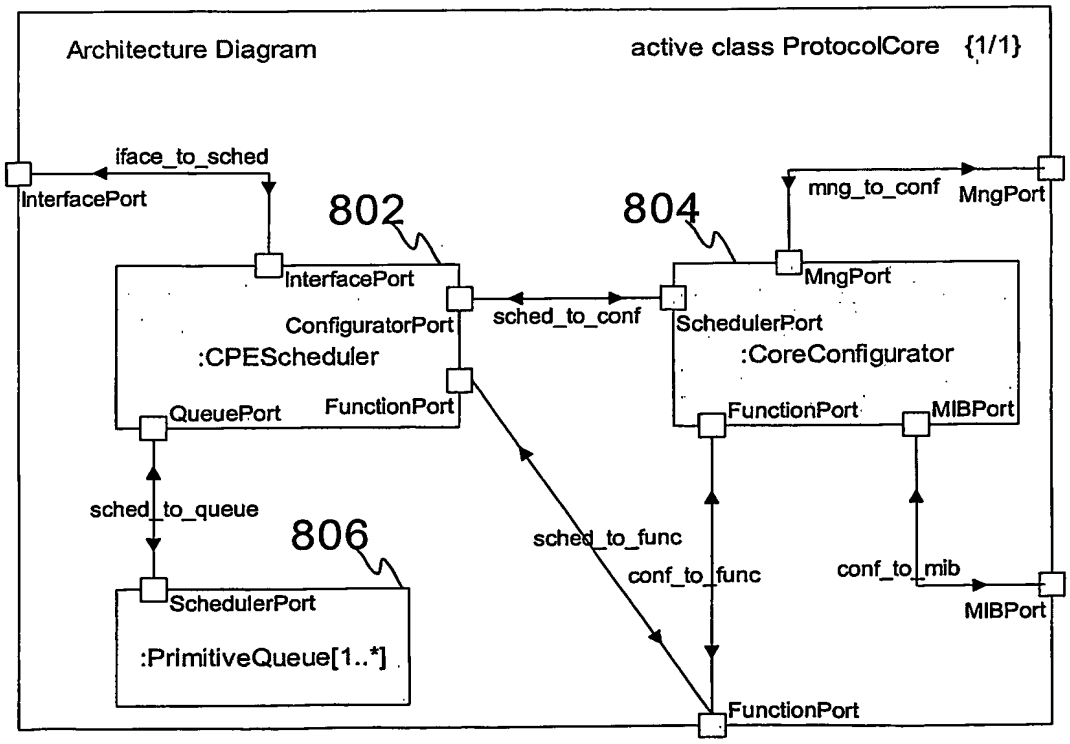

Figure 8

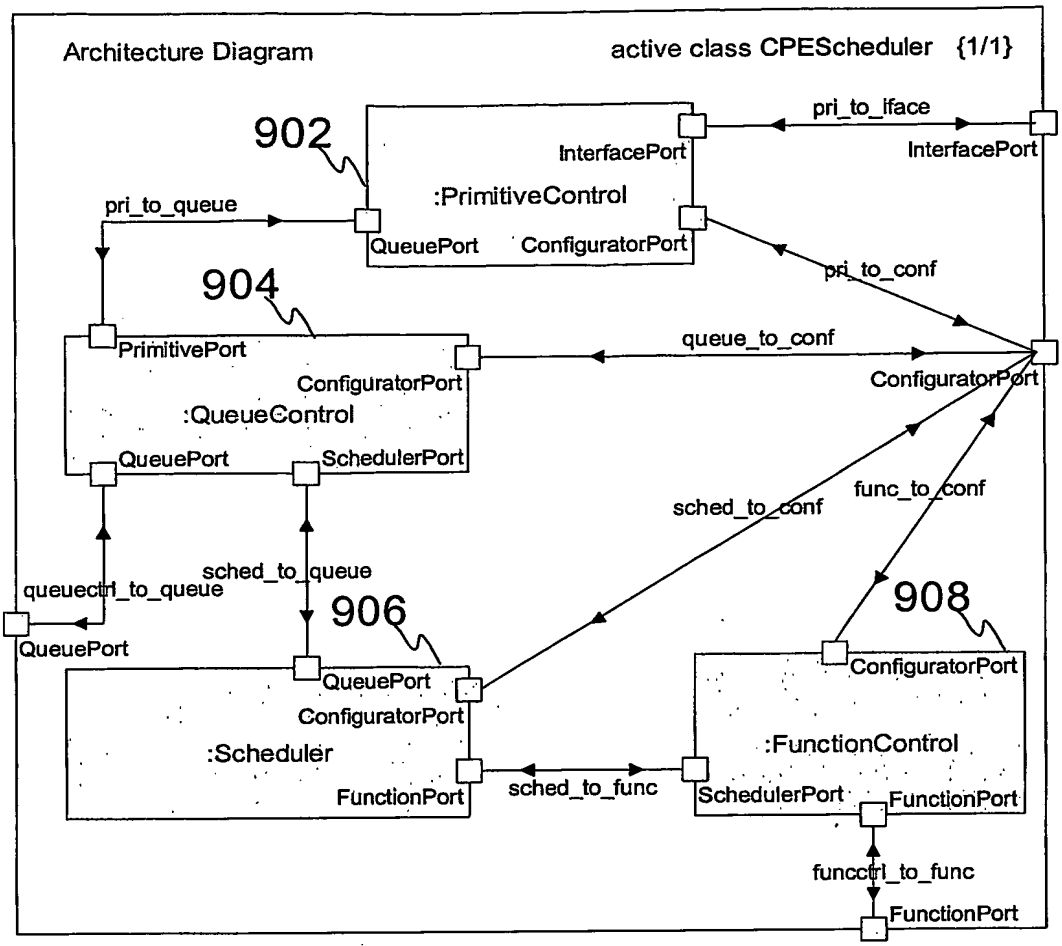

Figure 9

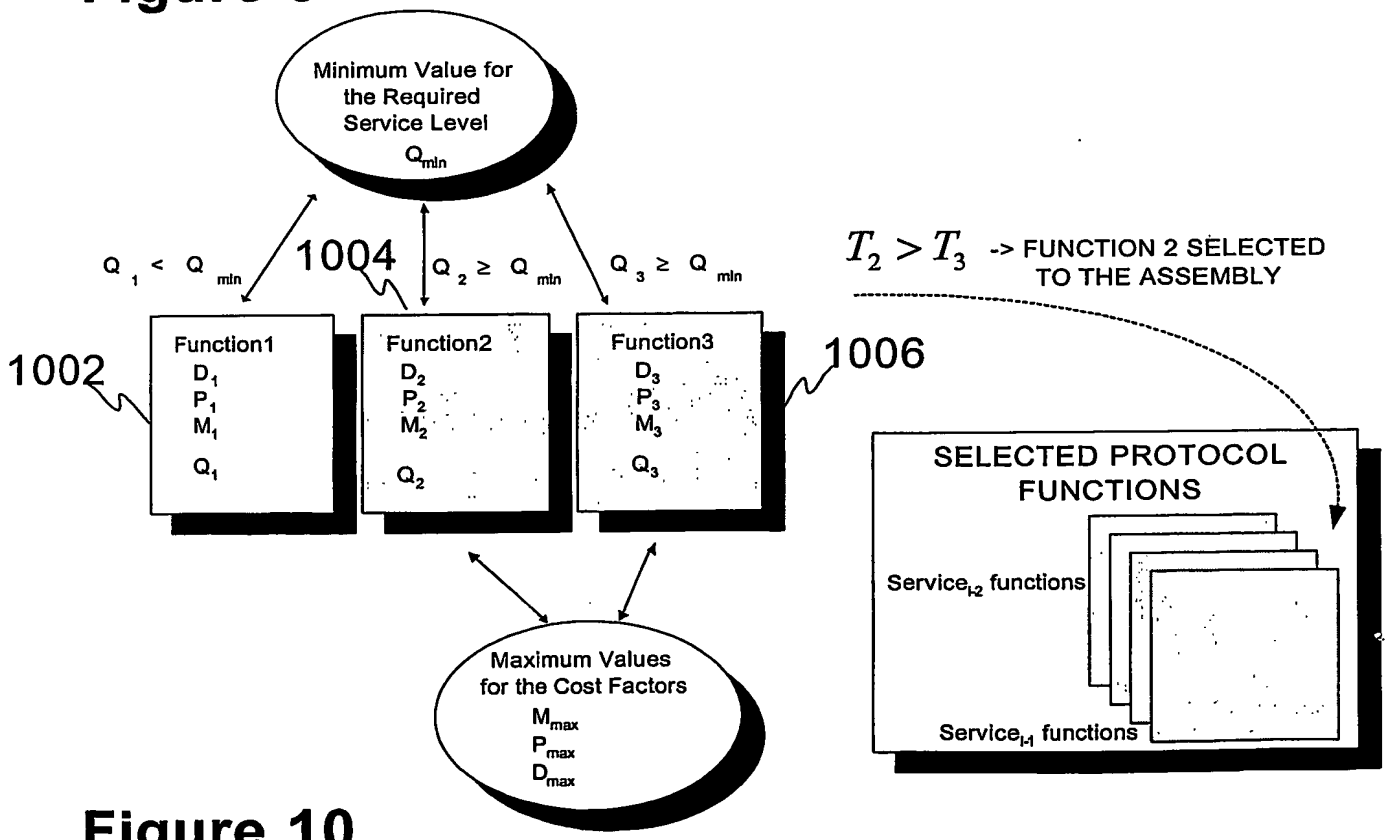

Figure 10

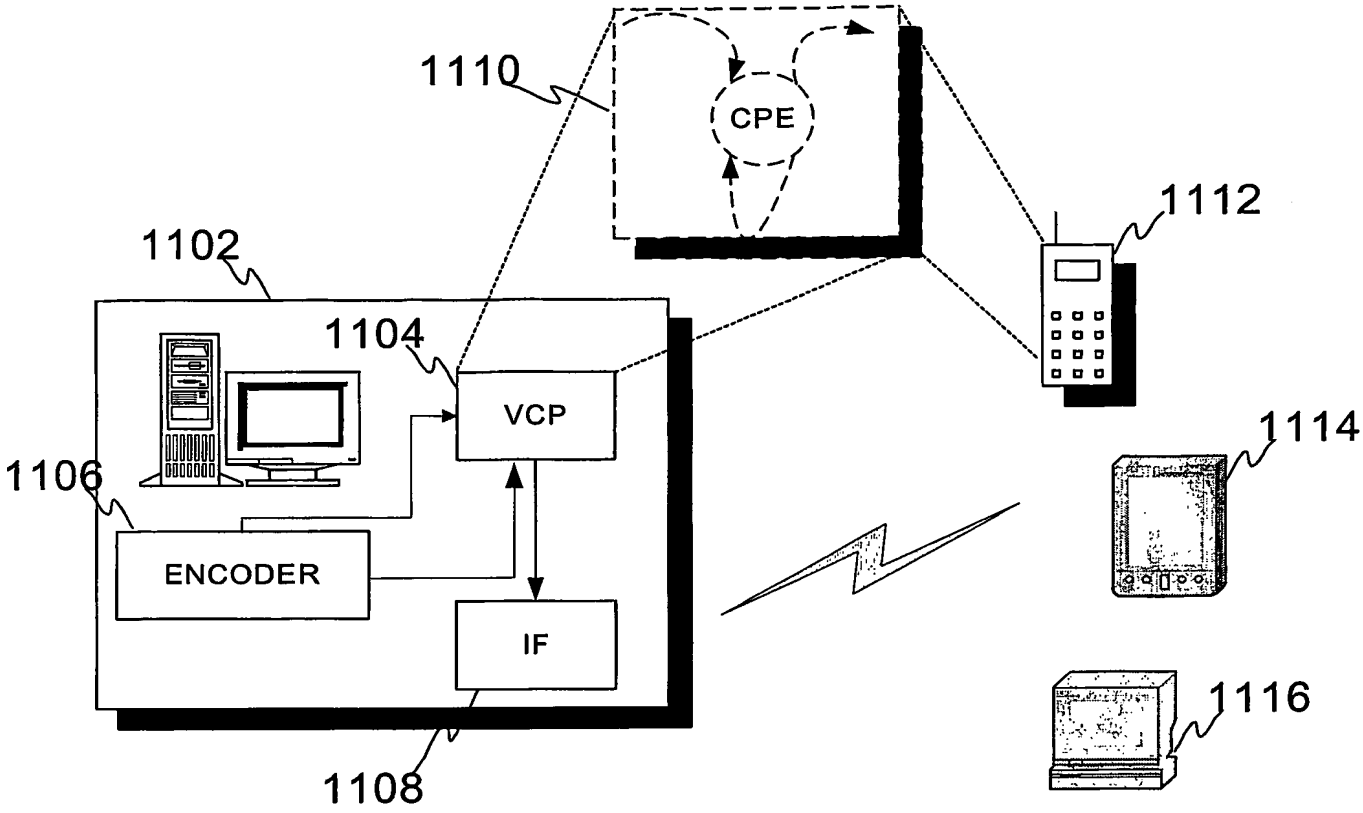

Figure 11

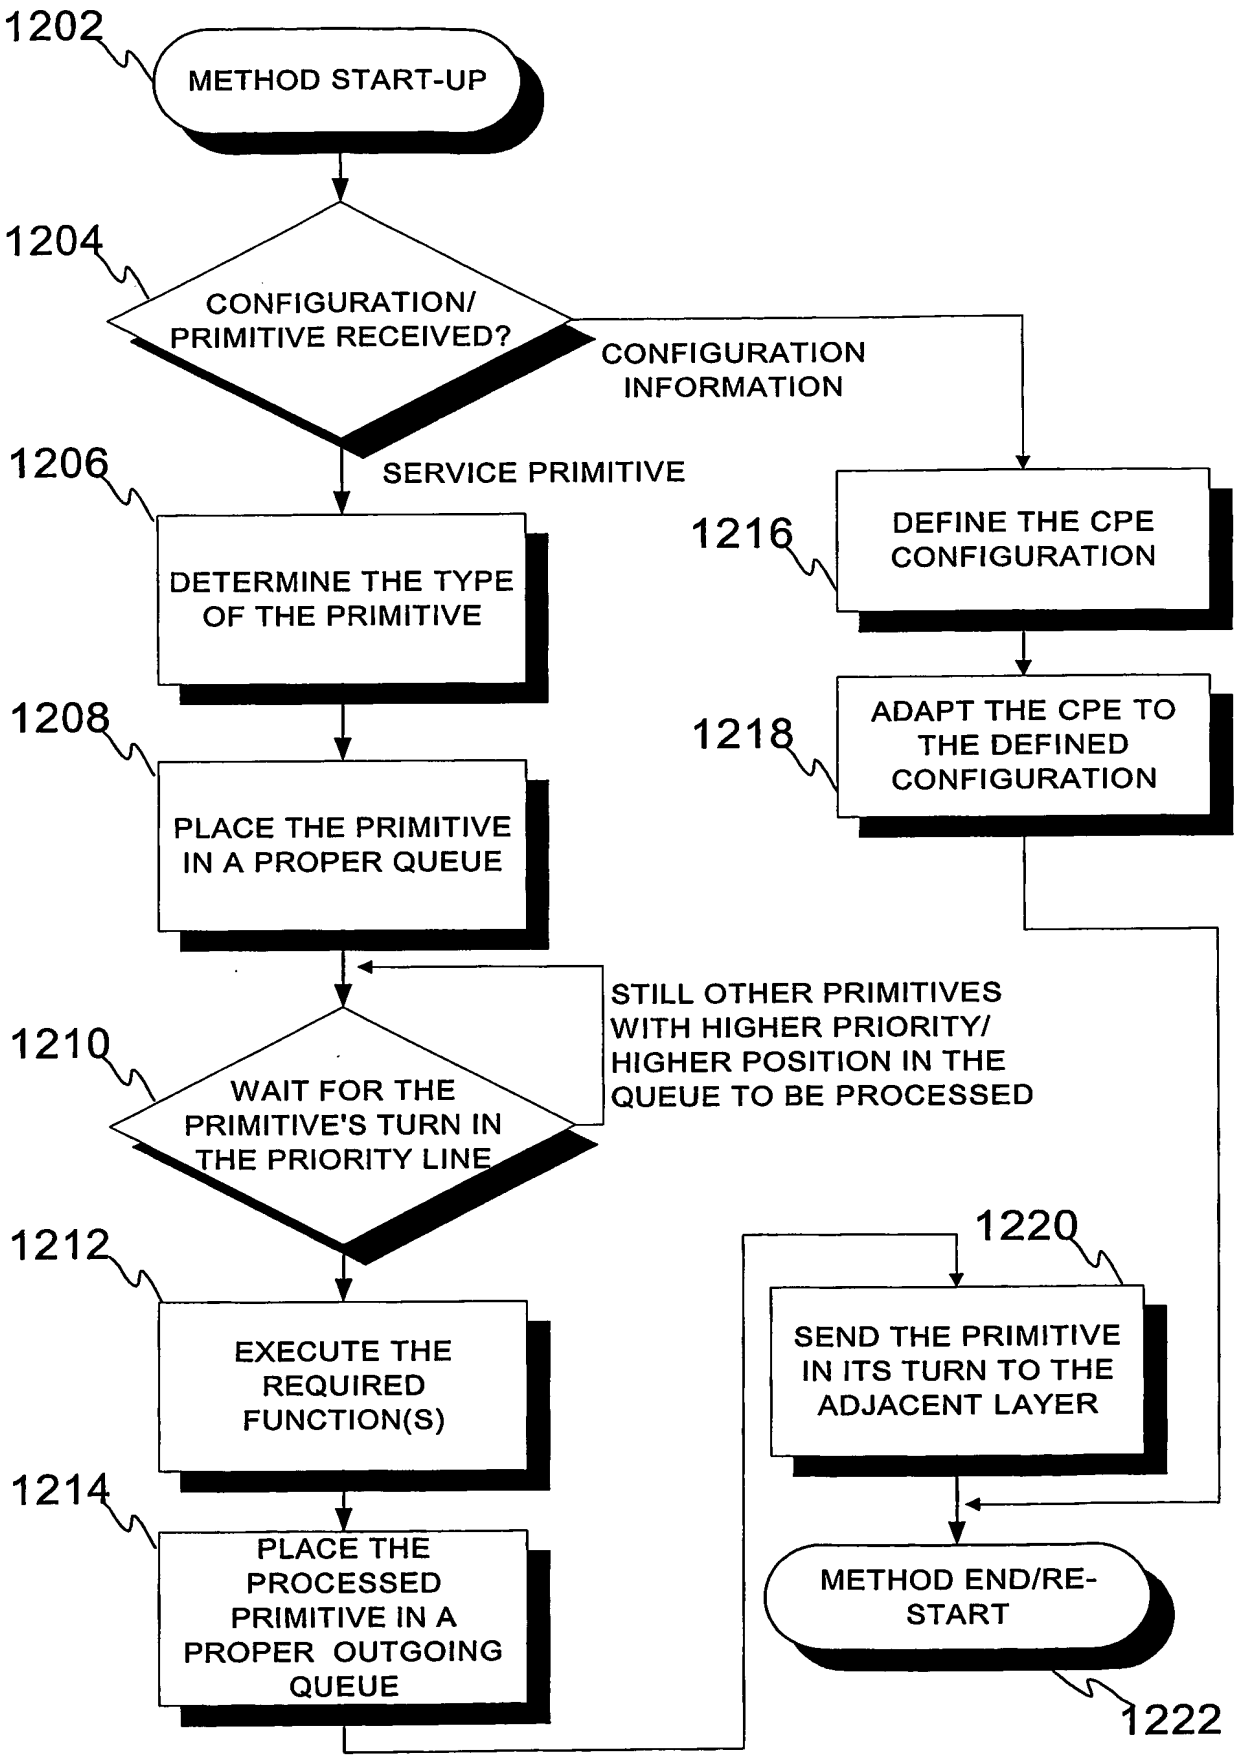
1202
METHOD START-UP
1204
CONFIGURATION/ PRIMITIVE RECEIVED?
CONFIGURATION INFORMATION
SERVICE PRIMITIVE
1206
DETERMINE THE TYPE OF THE PRIMITIVE
1208
PLACE THE PRIMITIVE IN A PROPER QUEUE
1210
WAIT FOR THE PRIMITIVE'S TURN IN THE PRIORITY LINE
STILL OTHER PRIMITIVES WITH HIGHER PRIORITY/ HIGHER POSITION IN THE QUEUE TO BE PROCESSED
1212
EXECUTE THE REQUIRED FUNCTION(S)
1214
PLACE THE PROCESSED PRIMITIVE IN A PROPER OUTGOING QUEUE
1216
DEFINE THE CPE CONFIGURATION
1218
ADAPT THE CPE TO THE DEFINED CONFIGURATION
1220
SEND THE PRIMITIVE IN ITS TURN TO THE ADJACENT LAYER
METHOD END/RE-START
1222

Figure 12A

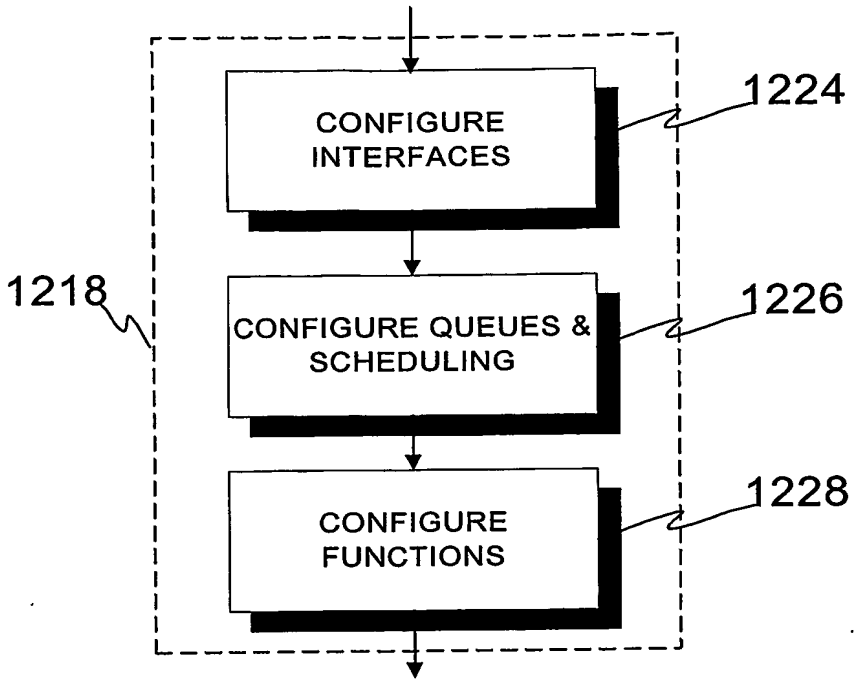

Figure 12B

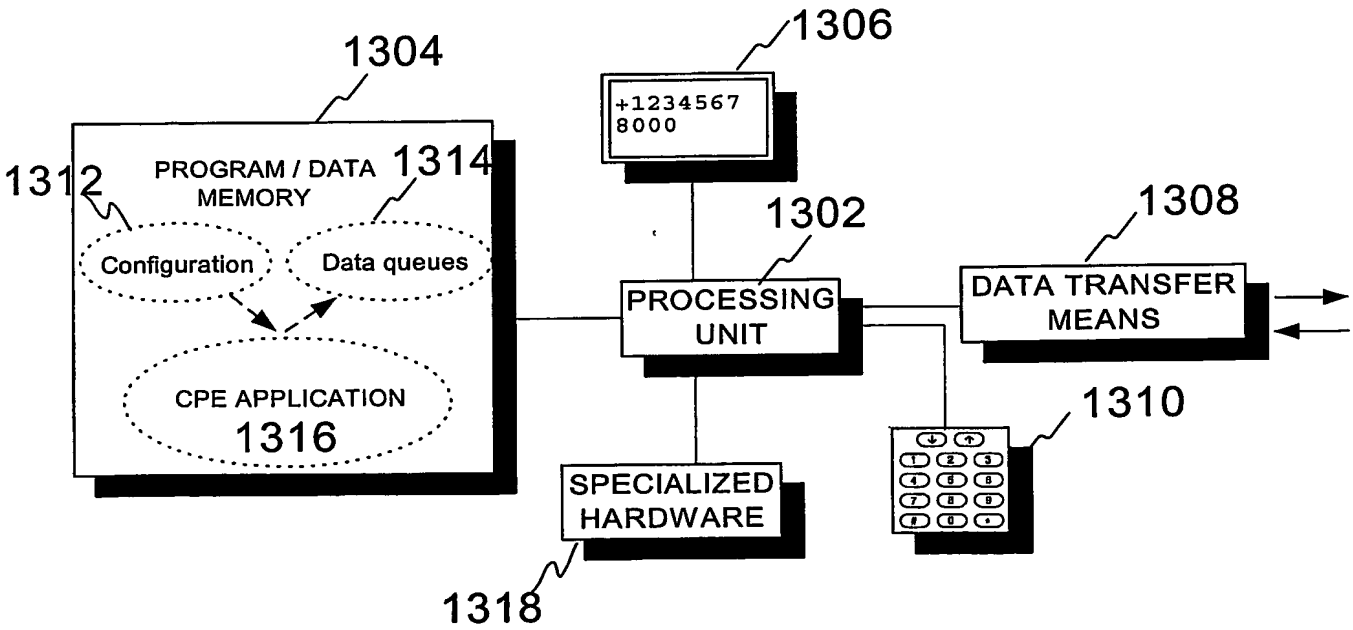

Figure 13